
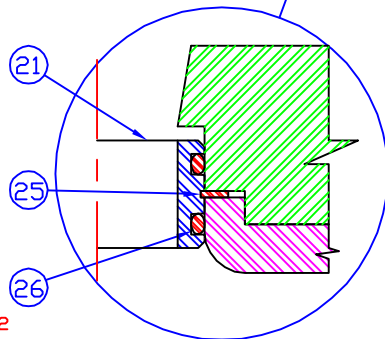


NO.	PART NUMBER	NAME	QTY.
1	ATP-625-11 X 1.25-F	BOLT BED	4
2	ATP-327	POST RETAINER	4
3		BED	1
4A	ATP-066-1	GUIDE POST 24"	4
4B	ATP-066-2	GUIDE POST 30"	4
4C	ATP-066-3	GUIDE POST 27"	4
5	ATP-3125-18 X 3	BOLT BUSHING	32
6	ATP-1905	BUSHINGS	4
7		RAM	1
8	ATP-3125-18-LN	NUT BUSHING	32
9		CROWN	1
10	ATP-150GP-B103	LOCKING COLLAR	4
16	ATP-122	STUD SPRING	4
17	ATP-625-18-LN	NUT SPRING	4
18	ATP-625 ID	WASHER SPRING	4
19A	ATP-9-2048-2	SPRING RED	4
19B	ATP-9-2048-3	SPRING GOLD	4
23	ATP-173	UPSTOP	4
24	ATP-625-18-JN	NUT UPSTOP	4
21	ATP-1815	ADAPT. AIRTUBE	1
22A	ATP-187 (F-8)	AIRTUBE 8" D.D.	1
22B	ATP-188 (F-14)	AIRTUBE 14" D.D.	1
22C	ATP-189 (F-18)	AIRTUBE 18" D.D.	1
25	ATP-RR-200	ADAPT. RET.	1
26	ATP-2-224	O-RING	2
27	ATP-PG12000-01	PIPE PLUG	1
28	ATP-PG15000-01	PIPE PLUG	1
29	ATP-130	TANK	1
30	ATP-DC02000-01	DRAINCOCK	1
31	ATP-CB-1120-3	SHOCK MOUNTS	3
32	ATP-J-2049-62	MOUNT WASHER	3
33	ATP-375-16 X 1.50	BOLT TANK	3
34	ATP-375 ID	BOLT WASHER	3
35	ATP-137	POLY TIP	4
36	ATP-50-13 X 1	BOLT STOP	4
37	ATP-579	STOP HEAD	4
38	ATP-519-1	RAM STOP EXT.	4
39	ATP-519-2	RAM STOP EXT.	4
40	ATP-519-3	RAM STOP EXT.	4
41	ATP-519-4	RAM STOP EXT.	4
42A	ATP-50-13 X 1.5-SSC	SET SCREW STOP	16
42B	ATP-50-13 X 2-SSC	SET SCREW STOP	16
43	ATC-10032-R	AIR VALVES	1
44	ATP-1.50X1.25-HXBS-01	HEX BUSHING	1
45	ATP-NII2002-01	PIPE NIPPLE	3
46	ATC-REG-FIL-01	REGULATOR	1
47	ATC-REG-GAU-01	GAUGE	1
49	ATC-SHU-125-01	SHUT OFF	1
50	ATP-200-100-EXT-01	BASE RAM STOP	4
51	ATP-375-16 X 1.50	BOLT RAM STOP	8

PNEUMATIC PRESS 1.5" GUIDE POST


(For Units Built After Jan-01-2008)

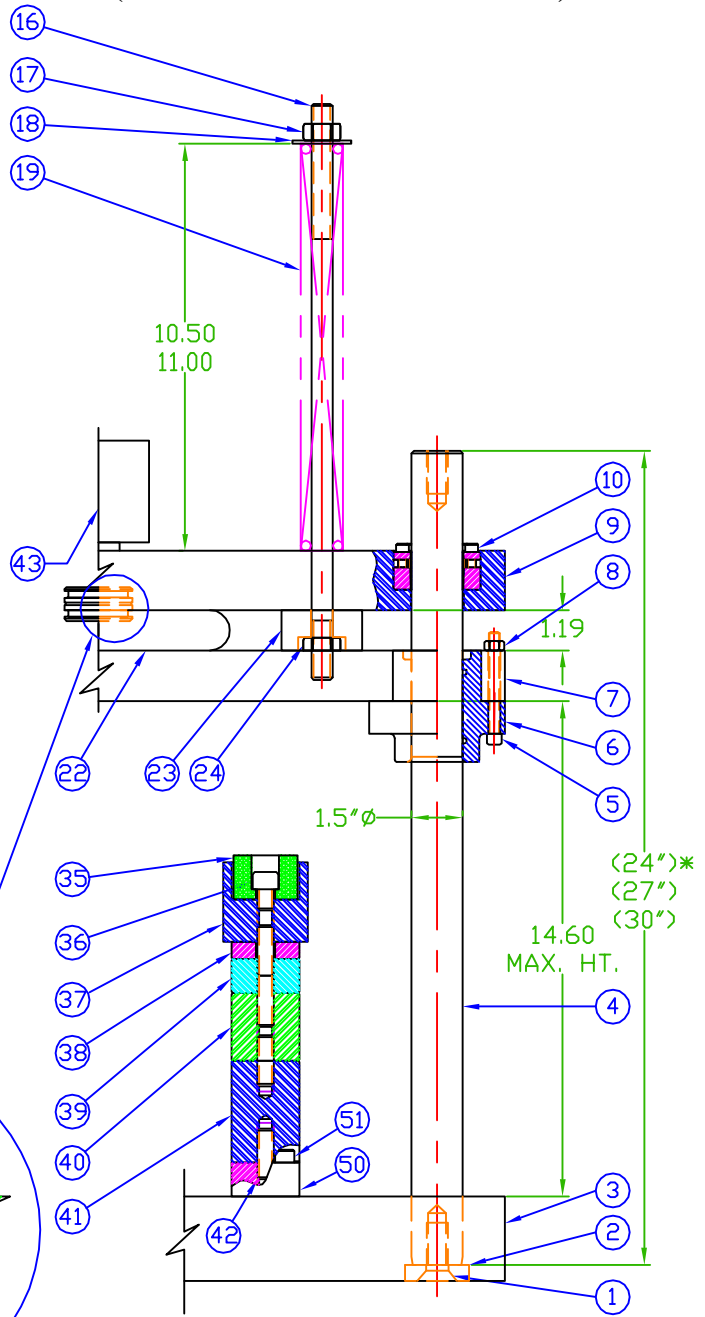

TYPICAL MODELS:

- ATP-870 ATP-1565
- ATP-470 ATP-850
- ATP-2411 ATP-1565-2
- R-4200 ATP-560
- ATP-1545 ATP-610
- ATP-124 ATP-145
- ATP-1545-2 ATP-885
- ATP-550 ATP-1575
- ATP-1550 ATP-1580
- ATP-1550-2 ATP-1670
- ATP-1670-2

TANK ASSEMBLY

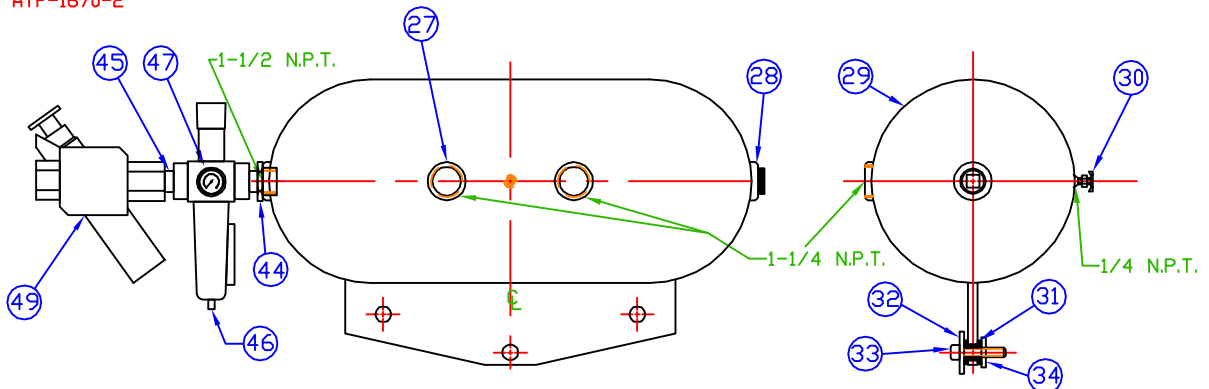

ATP-1717 (1.5 Inch Locking Collar)