


NO.	PART NUMBER	NAME	QTY.
1	ATP-50-13 X 1.50-F	BOLT BED	4
2	ATP-326	POST RETAINER	4
3		BED	1
4A	ATP-067-1	GUIDE POST 14"	4
4B	ATP-067-2	GUIDE POST 22"	4
5	ATP-3125-18 X 3.25	BOLT BUSHING	24
6	ATP-1904	BUSHING	4
7		RAM	1
8	ATP-3125-18-LN	NUT BUSHING	24
9		CROWN	1
10	ATP-B103-100-01	LOCKING COLLAR	4
12	ATP-122	STUD SPRING	2
13	ATP-625-18-LN	NUT SPRING	2
14	ATP-625 ID	WASHER SPRING	2
15A	ATP-9-2048-2	SPRING RED	2
15B	ATP-9-2048-3	SPRING GOLD	2
19	ATP-173	UPSTOP	2
20	ATP-625-18-JN	NUT UPSTOP	2
17	ATP-1815	ADAPT. AIRTUBE	1
18A	ATP-187 (F-8)	AIRTUBE 8" O.D.	1
18B	ATP-188 (F-14)	AIRTUBE 14" O.D.	1
21	ATP-RR-200	ADAPT. RET.	1
22	ATP-2-224	O-RING	2
23	ATP-PG12000-01	PIPE PLUG	1
24	ATP-PG15000-01	PIPE PLUG	1
25	ATP-130	TANK	1
26	ATP-DC02000-01	DRAINCOCK	1
27	ATP-CB-1120-3	SHOCK MOUNTS	3
28	ATP-J-2049-62	MOUNT WASHER	3
29	ATP-375-16 X 1.50	BOLT TANK	3
30	ATP-375 ID	WASHER TANK	3
31	ATP-137	POLY TIP	4
32	ATP-50-13 X 1	BOLT STOP	4
33	ATP-579	STOP HEAD	4
34	ATP-519-1	RAM STOP EXT.	4
35	ATP-519-2	RAM STOP EXT.	4
36	ATP-519-3	RAM STOP EXT.	4
37	ATP-519-4	RAM STOP EXT.	4
38	ATP-50-13 X 1.5-SSC	SET SCREW STOP	16
38	ATP-50-13 X 2-SSC	SET SCREW STOP	16
39	ATC-10032-R	AIR VALVE	1
40	ATP-1.50X1.25-HXBS-01	HEX BUSHING	1
41	ATP-NI12002-01	PIPE NIPPLE	3
42	ATC-REG-FIL-01	REGULATOR	1
43	ATC-REG-GAU-01	GAUGE	1
45	ATC-SHU-125-01	SHUT OFF	1
46	ATP-200-100-EXT-01	BASE RAM STOP	4
47	ATP-375-16 X 1.50	BOLT RAM STOP	8

PNEUMATIC PRESS 1" GUIDE POST


(For Units Built After Jan-01-2008)

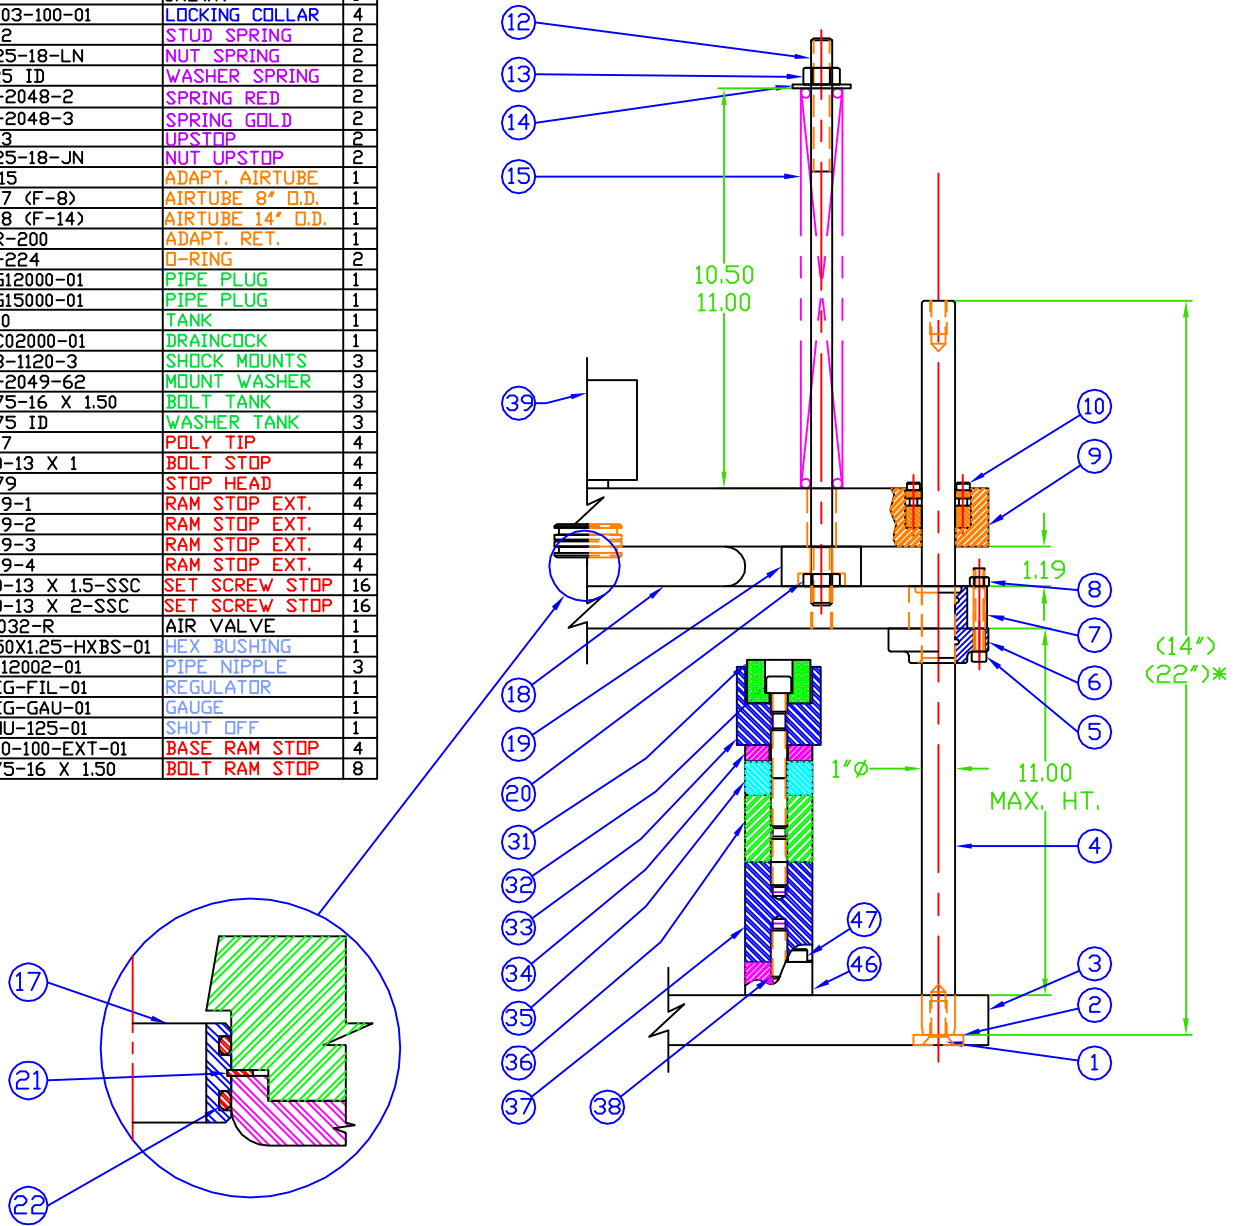

TYPICAL MODELS:

- ATP-638 ATP-1535
- ATP-125 ATP-1540
- ATP-500 ATP-1555
- ATP-2510 ATP-1560
- ATP-1520 R-4000
- ATP-1525 R-4100
- ATP-1530

TANK ASSEMBLY

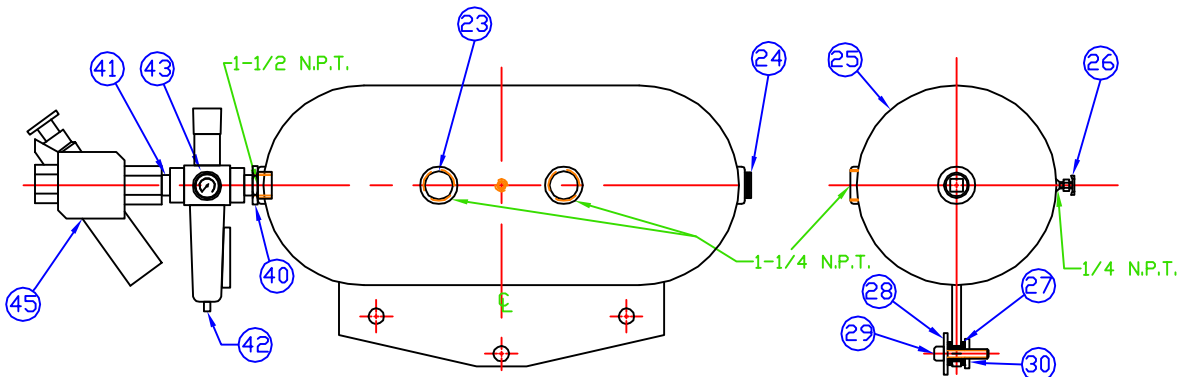

ATP-1716 (1 Inch Locking Collar)